 


955 ACCESS WITH ACTIVATE DAILY OPERATION INSTRUCTIONS

 
ENSURE THE SYSTEM IS POWERED ON

1. Locate the 24V power supply and power cable and connect the AC power cord into the DC power supply. Insert the DC connector into the DC Power jack on the back and plug the AC power cord into an electrical outlet.
2. Press the Activate Station power button to power on the 955. When powered on, the blue LED on the front of the 955 will glow.

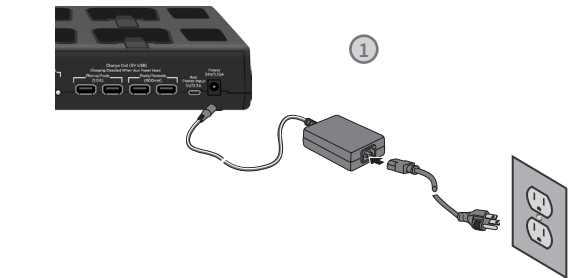


USING THE FLEXMIKE

3. Remove the microphone from the charger and place the microphone around your neck. Ensure the top of the microphone is at the collarbone.
4. Press the power/mute button. The teacher status will turn blue, indicating the microphone is active.
5. Microphone volume may be adjusted at the microphone by using the Up/Down buttons on the side of the Flexmike. It may also be adjusted by using the Microphone volume buttons on the front of the Activate.

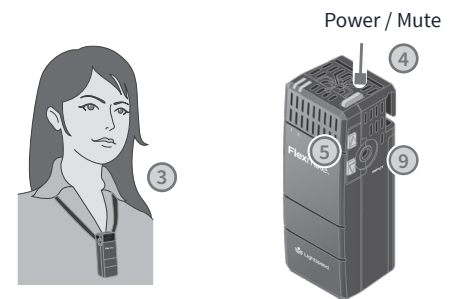

USE ACTIVATE STATION AS A WIRELESS AUDIO LINK

 
7. Plug your external audio equipment (for example, laptop), into one of the input jacks on the back of the Activate labeled "Aux Input" using a 3.5mm patch cable.
8. Adjust volume at the audio source. If necessary, further volume adjustment may be made using the Audio In volume buttons on the front of the Activate.
9. You may also connect an audio source using a 3.5mm patch cable to the Input jack on the side of a second Flexmike.

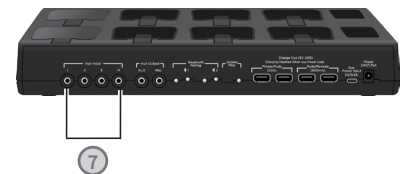

CHARGE FLEXMIKE NIGHTLY

10. Place the Flexmike into the charger. The power button light will glow red and the Mic status light will glow blue. When a Flexmike is fully charged, the power button light on the mic will change to green.

 
For instructions on capturing audio and video using the Activate App, and for complete operating instructions, go to www.lightspeed-tek.com/955-usermanual (or scan the 2D barcode below).

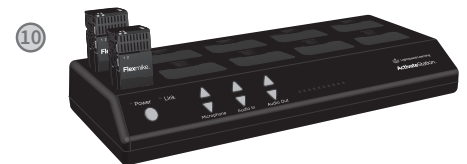

955 ACCESS SET UP AND DAILY OPERATION INSTRUCTIONS





ENSURE THE SYSTEM IS POWERED ON

 1. Ensure the 24V/2.5A power supply is plugged into the 955 Access and the power cable is plugged into an outlet.
2. Press the 955 Access, or optional Media Connector, power button to power on the 955. When powered on, the blue LED will glow.

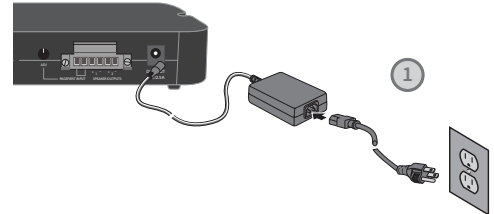

USING THE FLEXMIKE

    3. Remove microphone from charger and place the microphone around your neck. Ensure the top of the microphone is at the collarbone.
4. Press the power/mute button. The teacher status will turn blue, indicating the microphone is active.
5. Microphone volume may be adjusted at the microphone by using the Up/Down buttons on the side of the Flexmiike. It may also be adjusted by using the Microphone volume knob on the front of the 955 Access or optional Media Connector.

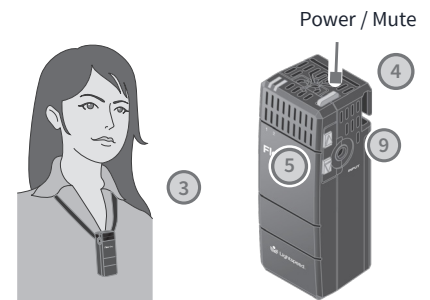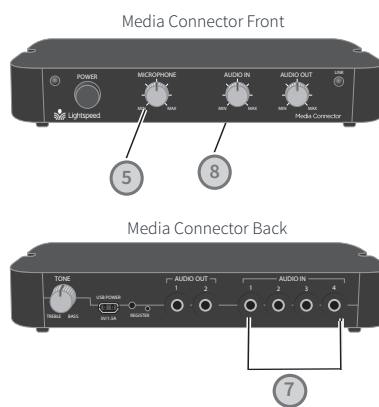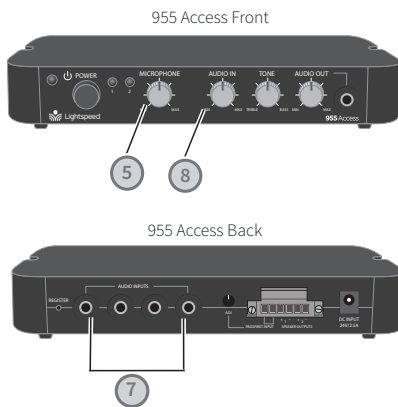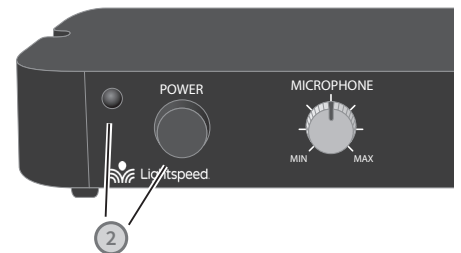


USING A WIRELESS AUDIO LINK

7. Plug your external audio equipment (for example, laptop), into the input jack on the back of the 955 Access or into one of the input jacks on the back of the Media Connector labeled "Audio In" using a 3.5mm patch cable.
8. Adjust volume at the audio source. If necessary, further volume adjustment may be made using the Audio In volume knob on the front of the 955 Access or the Media Connector.
9. You may also connect an audio source using a 3.5mm patch cable to the Input jack on the side of a second Flexmiike.

CHARGE FLEXMIKE NIGHTLY

 10. Place the Flexmiike into the cradle charger. The power button light will glow red and the Mic status light will glow blue. When Flexmiike is fully charged, the power button light on the mic will change to green.

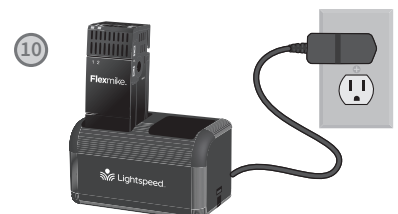

For complete operating instructions, go to www.lightspeed-tek.com/955-usermanual (or scan the 2D barcode on the previous page).