 
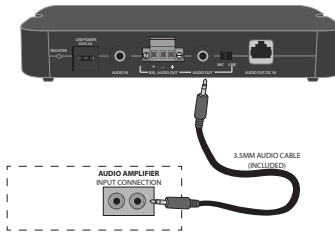 


MULTIMIKE SET-UP AND QUICK START INSTRUCTIONS


DETERMINE SET-UP LOCATION AND PLUG IN POWER SUPPLY

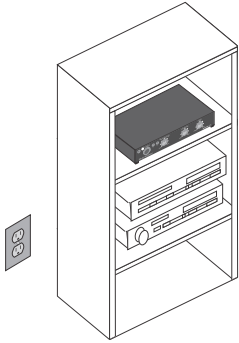

1. The Multimike is generally located near the amplifier.
2. Plug one end of the included 3.5mm cable into the AUDIO OUTPUT connection on the Multimike. Plug the other end into an audio input connection on the amplifier.
3. Plug the micro USB end of the power cable into the power adapter and the other end into the micro USB port on the back of the Multimike. Plug the USB1 into a wall outlet.


USING A FLEXMIKE

3. Remove the Flexmike from the charger and place around your neck. Ensure the top of the microphone is at the collarbone.
4. Press the power/mute button. The mic status will turn blue, indicating the microphone is active.
5. Microphone volume may be adjusted at the microphone by using the Up/Down buttons on the side of the Flexmike. It may also be adjusted by using the Microphone volume knob on the front of the Multimike.
6. Plug a laptop, MP3 player or other audio device into this 3.5mm jack to wirelessly transmit the audio signal to be played through the system.

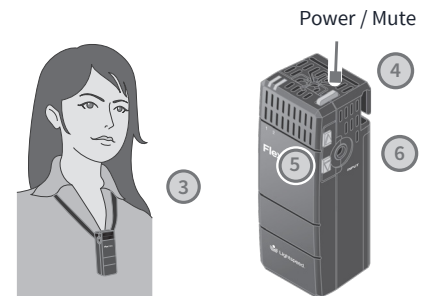

USING A SHAREMIKE

7. Unplug the microphone from the charger. The mic status light will turn red.
8. Press the power/mute button. The mic status will turn blue, indicating the microphone is active.
9. Battery indicator light.
10. Plug a laptop, MP3 player or other audio device into this 3.5mm jack to wirelessly transmit the audio signal to be played through the system.
11. Microphone volume may be adjusted at the Multimike by using the Microphone volume knob on the front of the Multimike.
12. Up to 5 microphones may be used with a Multimike.

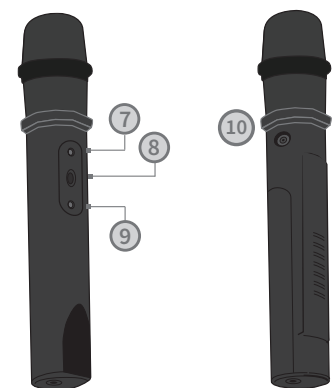


USING THE OPTIONAL MEDIA CONNECTOR WITH MULTIMIKE



SEE SET-UP INSTRUCTIONS FOR MULTIMIKE ON PREVIOUS PAGE.

ENSURE THE SYSTEM IS POWERED ON.



1. Plug the micro USB end of the power cable into the power adapter and the other end into the micro USB port on the back of the Media Connector. Plug the USB1 into a wall outlet.
2. Press the Multimike or Media Connector power button to power on the Multimike.
3. When powered on, the blue LED will glow.

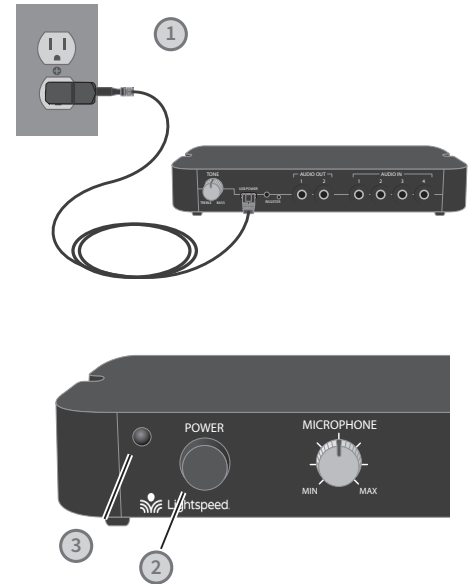

SEE MICROPHONE INSTRUCTIONS ON PREVIOUS PAGE.

USING A WIRELESS AUDIO LINK

4. Plug your laptop, MP3 player or other audio device into the Audio In 3.5mm jack on the back of the Multimike, or into one of the input jacks on the back of the Media Connector labeled "Audio In" using a 3.5mm patch cable.
5. Adjust volume at the audio source. If necessary, further volume adjustment may be made using the Audio In volume knob on the front of the Media Connector.

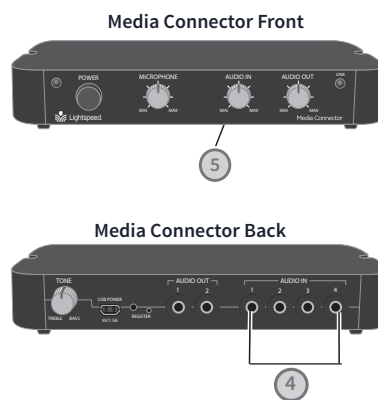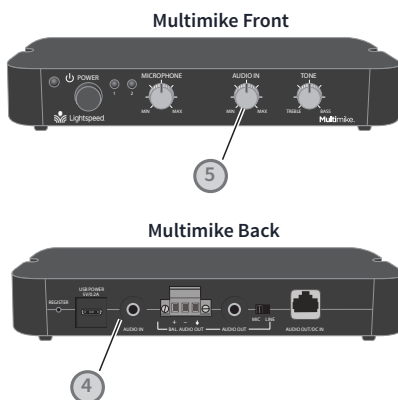

NOTE: When Media Connector is paired to Multimike and powered on, a maximum of 4 microphones may be used.

For complete operating instructions, go to www.lightspeed-tek.com/MM-usermanual (or scan the 2D barcode).

