

Pairing Microphones to Topcat



Your system is shipped with microphones and base units pre-paired for quick and easy use.

If for any reason you need to pair new components, follow this pairing process:

PLEASE NOTE: Microphones should be out of the charger while pairing.

1

From a powered off state, point the IR transmitter lens toward the base unit (for ShareMike, the transmitter lens is located on the back of the microphone).




2

Press and hold the power button for 5 seconds until the mic 1 and mic 2 lights start flashing, then release the button and let the pairing process finish.

3


The "status" light on the base unit will light up indicating the pairing process is complete. The mic 1 or mic 2 light on the microphone will stay illuminated.

FLEXMIKE

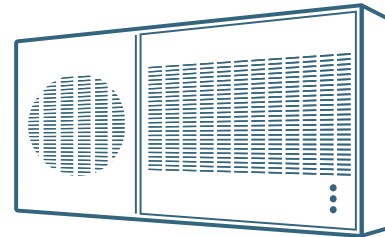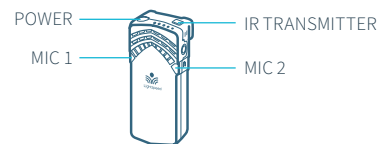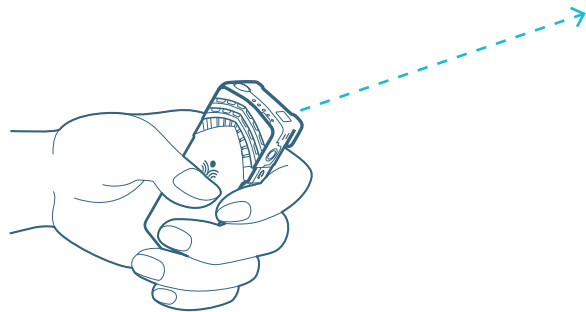

TOPCAT

SHAREMIKE

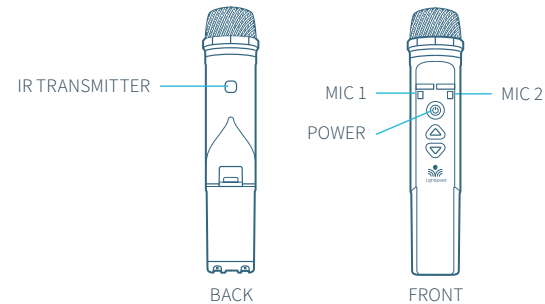

Pairing Topcat to Media Connector (Optional)



Your system is shipped with microphones and base units pre-paired for quick and easy use.

If for any reason you need to pair new components, follow this pairing process:

PLEASE NOTE: Microphones should be out of the charger while pairing.

①

With the microphone turned on, point the IR transmitter lens toward the Topcat (for ShareMike, the transmitter lens is located on the back of the microphone).

②

Press and hold the Flexmike power button for 5 seconds until the status light on the Topcat starts flashing, then release the button. At this point, the status light on Topcat will blink for 30 seconds.


If after 30 seconds the status light blinks rapidly, you will need to start the pairing process again.

③



With the Media Connector powered on, press and hold the tone button to put it into pairing mode.

When the status lights are solid on both Topcat and Media Connector, pairing is successful.

TOPCAT

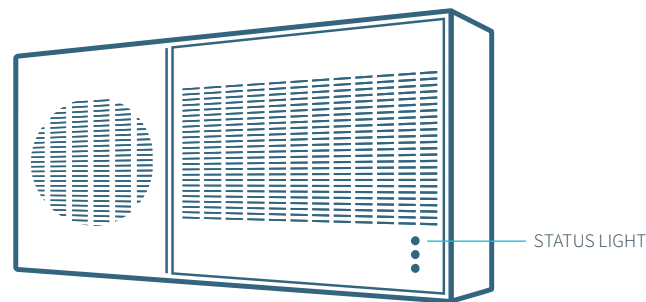

FLEXMIKE

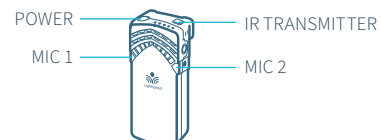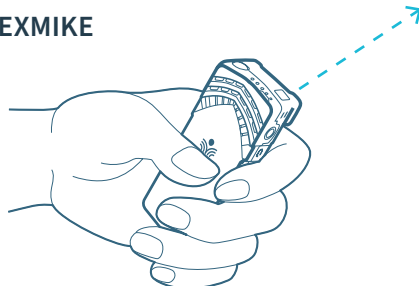

MEDIA CONNECTOR

