


Pairing your Clearmike





With the Clearmike powered off, point the IR transmitter lens toward the Topcat Cascadia.

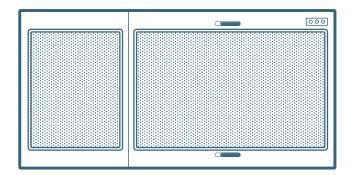



Your system is shipped with microphones and base units pre-paired for quick and easy use. If for any reason you need to pair new components, follow this pairing process:

PLEASE NOTE: All microphones must be out of the charger while pairing.



Press and hold the Power/Mute button for 5 seconds until the Talk/Mute light starts flashing blue and white. The Status light on the Topcat Cascadia will also start flashing blue and white.



When complete, the Status light on the Topcat Cascadia will turn blue, the Talk/Mute light on the microphone will be white, and the display on the microphone will say "Pair Success".






Pairing your Sharemike



Your system is shipped with microphones and base units pre-paired for quick and easy use.

If for any reason you need to pair new components, follow this pairing process:

PLEASE NOTE: All microphones should be out of the charger while pairing.

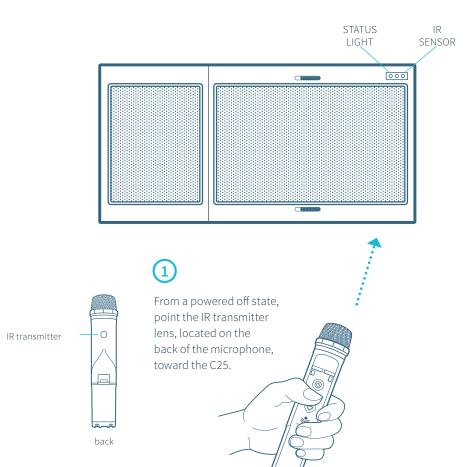



Press and hold the power button for 5 seconds until the mic 1 and mic 2 lights start flashing, then release the button and let the pairing process finish.



The Status light on the base unit will light up indicating the pairing process is complete. The mic 1 or mic 2 light on the microphone will stay illuminated.





Pairing Topcat Cascadia to Media Connector (Optional)



Your system is shipped with microphones and base units pre-paired for quick and easy use.

If, for any reason, you need to pair new components, follow this pairing process:



From a powered off state, point the IR transmitter lens toward the Topcat Cascadia (for Sharemike, the transmitter lens is located on the back of the microphone).




Press and hold the Clearmike power button for 5 seconds until the status light on the Topcat Cascadia starts flashing, then release the button. At this point, the status light on Topcat Cascadia will blink for 30 seconds.

If after 30 seconds the status light blinks rapidly, you will need to start the pairing process again.




With the Media Connector powered off, press and hold the Tone Selector button to put it into pairing mode.

When the status lights are solid on both Topcat Cascadia and Media Connector, pairing is successful.

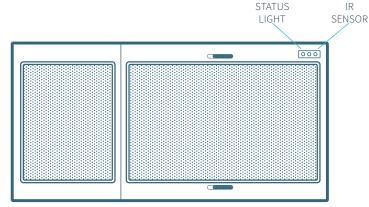

CLEARMIKE

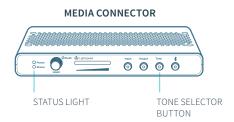

TOPCAT CASCADIA

